 


## AV Control System Help For Rooms with 1 Projector



### Welcome Screen

Touch the screen to begin.

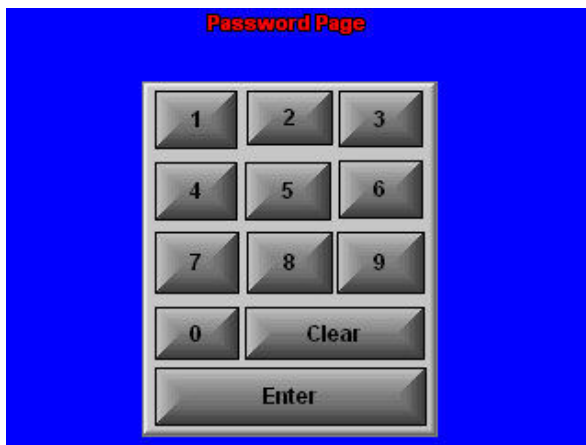

### Password Page

Enter your password by touching the screen.

Touch **Enter** to accept the password and activate the system.

If you make a mistake touch **Clear** and start again.

## THE HOME SCREEN



### Home Screen

Touch the desired button to display that source on screen.

For example:

To display Laptop on the projector touch the **Laptop** button.

## SOURCE CONTROLS

### Laptop



Touch **FREEZE ON / OFF** to freeze the image on the projector screen

Touch **NO SHOW ON / OFF** to blank the projector screen

Touch **AUTO IMAGE** if the image doesn't line up properly

Touch **Home** to return to the Home screen

### Basic DVD Controls




Controls for Play, Pause, Skip Forward, Skip Back, Chapter Skip Forward, Chapter Skip Back, and Stop.

For additional controls touch **Menu**

Touch **Home** to return to the Home Screen

### Additional DVD Controls

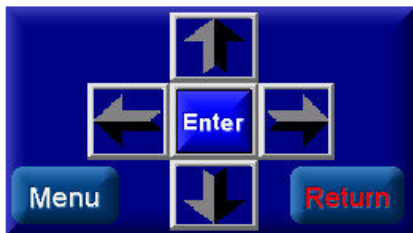

Use these controls to navigate through a DVD.

Touch **Menu** to access the DVD's main menu.

Touch **Return** to go back to basic controls.

### Basic VCR Controls



Controls for Play, Pause, Fast Forward, Rewind, and Stop.

Touch **DISPLAY** to turn the On-Screen Counter on or off.

Touch **Home** to return to the Home Screen

## MORE CONTROLS




### Volume Up / Down Control

Touch the top of the Volume Bar to raise the volume.

Touch the bottom of the Volume Bar to lower the volume.

Touch the centre of the Volume Bar to mute the volume.

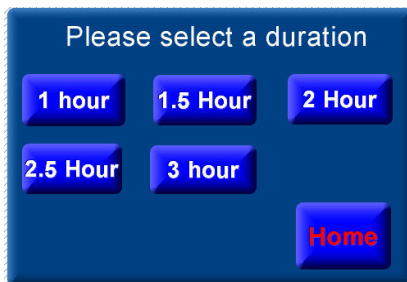

### Session Duration

Shows the time remaining until the AV Control System will shut itself off to conserve energy and prolong equipment life.

The default is 1-1/2 hours.

To extend, touch the Time Remaining and select a new duration.

**Once the system shuts down it cannot be re-started for 2 minutes. Be sure you have enough time for your presentation.**



Touch to display basic help.

### Basic Help

#### Main Help Page

- Selected the desired source button to start. Projector will start when source is selected.
- Projector will take 30 seconds to warm up.
- Operate equipment as normal.
- When you are finished with AV equipment touch the Room Shutdown button .


DVD Help

Laptop Help

VCR Help


Timer Help

Home

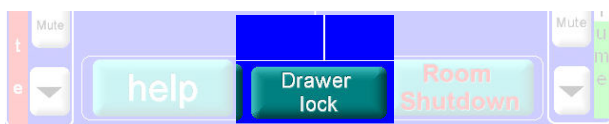

Touch to unlock the drawer or cabinet where the wireless microphone is kept.

## SHUT DOWN

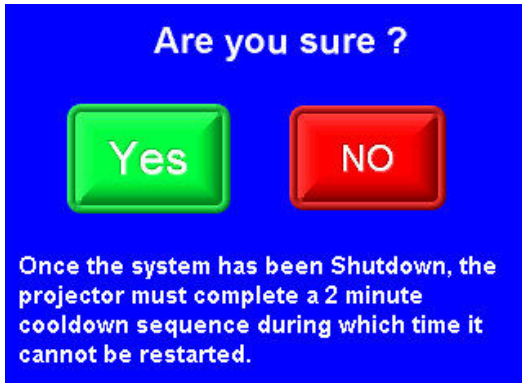

### Shut Down

Remember to return the wireless microphone to the drawer and to **shut down** after your class or presentation.

Touch **Yes** to shut down.  
Touch **NO** to return to your session.

Be prepared for a **2 minute wait** if you plan to turn it on again.