

## Panasonic VHS/DVD Help



### Tips

#### Playback Controls

Controls needed during playback are located on the AV Control Panel.

#### Eject

Use the buttons indicated above to eject your VHS or DVD.